

D-Flector Stone Guards: Best safety companion for the road untraveled.

You have acquired a D-Flector accessories , **Congratulations.**

D-Flector stone guard provided unparallel protection to your RV, adjustable fittings, remain durable in harshest outback conditions.


Important:

1. Refer to your fitting instructions to ensure that product is installed correctly.
2. Check the contents of kit before commencing fitment and report any discrepancies.
3. Keep checking D-Flector website to ensure you have latest revisions of these instructions.

Fit Time : 15 mins

Step 1 – Fit draw bar mounting bracket

Depending on the style of your jet ski trailer, it is possible to mount the stone guard in either position “A” or position ‘B” as shown below:

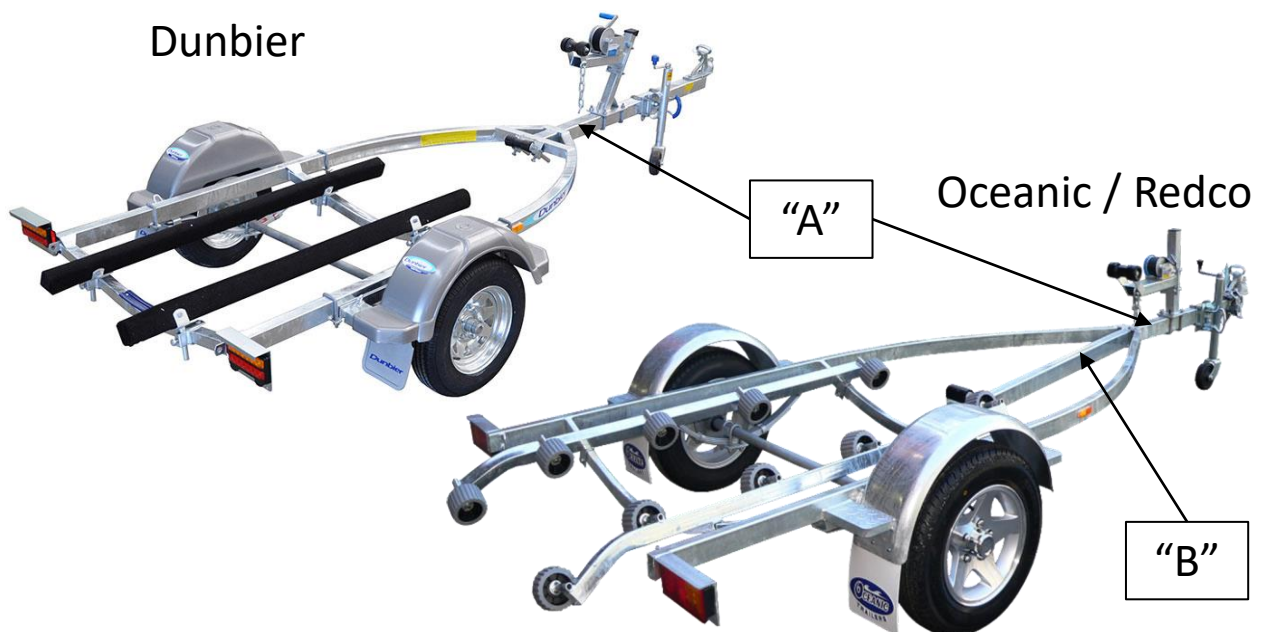


**PERIODICALLY CHECK TO ENSURE THAT ALL FASTENERS ARE TIGHT
AND ALL STRUCTUAL COMPONENTS ARE SOUND.**

Step 1 – Fit Draw Bar Mounting bracket

- 1/ Place **mounting bracket** on trailer.
- 2/ Secure to trailer with correct length **U Bolt**.

Warning:- Ensure any cables running along or under the chassis are not interred with

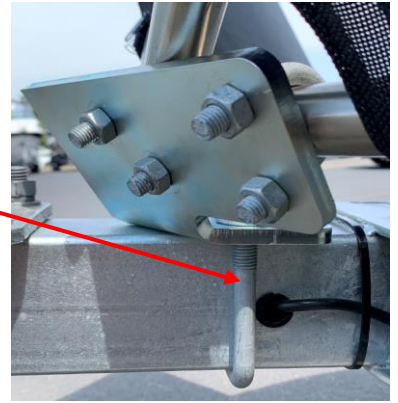

Step 2 – Fit Tubular Frames

Secure the **tubular frames** to the rear of the **mounting bracket** using the small “**U-bolts**” and fasten.



Step 3 – Fit Covers

Slide the **covers** over the **tubular frame** from the side and secure with **zippers** running along the inside edge.



Maxwell and Higgs Pty Ltd provides a three-year warranty from the date of purchase against defects in materials and workmanship. If the product is found to be defective, the product will be repaired or replaced at our discretion. This warranty excludes product alterations, misuse, or improper installation, and does not cover incidental or consequential damages. For warranty service, return the product with proof of purchase to the address listed in this manual.